

EMAIL US

<<http://www.scion.com/>> , "Contact"

CHAT

On weekdays you can chat with a Scion Customer Advocate.

<<http://www.scion.com/>> , "Have a Question?" or "Contact"

CALL US

For the Scion Customer Experience dial 1.866.70.SCION.

2006**MAILING ADDRESS**

Scion

19001 S. Western Ave.

D102, P.O. Box 2742

Torrance, CA 90509-2742

USA

OUR WEBSITE

<<http://www.scion.com/>>

**Scion xA****Pocket Reference Guide**

©2005 Scion, a marque of Toyota Motor Sales, U.S.A., Inc.

00452-PRG06-XA

2006 SCION xA

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Scion, a marque of Toyota Motor Sales, U.S.A., Inc., wish you many years of satisfied driving in your new SCION xA.

! A word about safe vehicle operations


This *Pocket Reference Guide* is not a full description of SCION xA operations. Every xA owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.


All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Spare tire & tools

Tool location

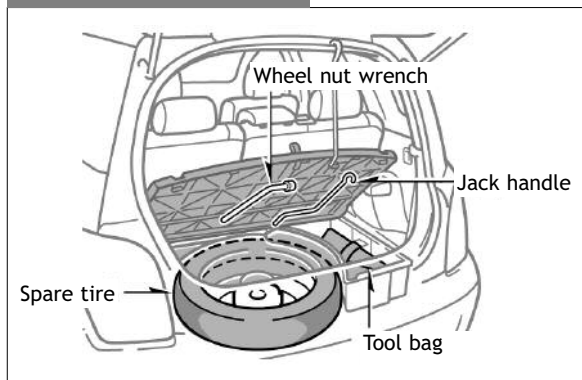

Removing the spare tire

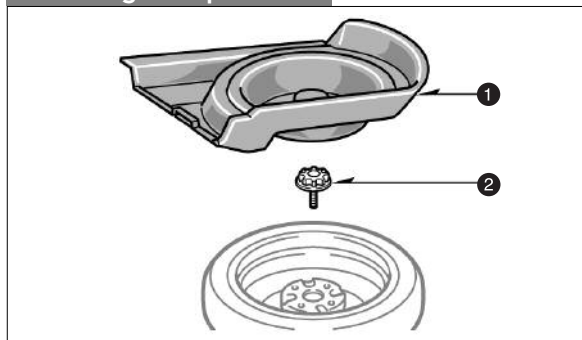

- ① Remove the spare tire cover.
- ② Loosen and remove the bolt.


Refer to the *Owner's Manual* for jack positioning and tire changing procedures.

INDEX

Item	Page no.
OVERVIEW	
Engine maintenance	7
Fuel tank door release and cap	6
Hood release	6
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
FEATURES/OPERATIONS	
Air conditioning/Heating	13
Automatic transmission	8
AUX jack	15
Clock	13
Cup holders	14
Door locks	9
Grocery bag hooks	14
Light control-Instrument panel	14
Lights & turn signals	11
Luggage storage box	14
Manual transmission	8
Parking brake	8
Seat adjustments-Front	9
Seat adjustments-Rear	10
Seats-Head restraints	10
Steering wheel switches	15
Tilt steering wheel	10
Windows	12
Windshield wiper & washer	12
SAFETY AND EMERGENCY FEATURES	
Doors-Child safety locks	16
Seat belts	16
Seat belts-shoulder belt anchor	16
Spare tire & tools	17

OVERVIEW


Instrument panel

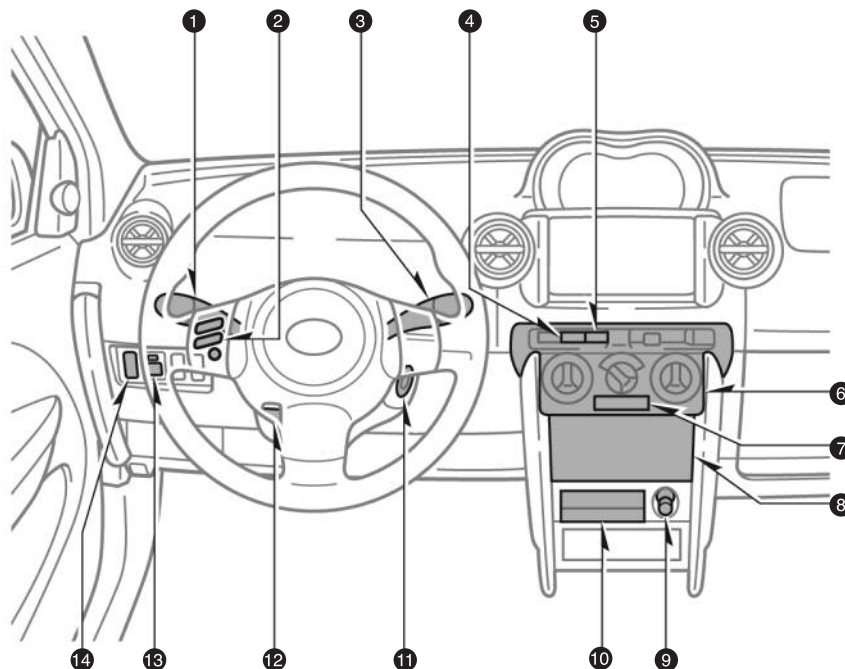

- ① Headlight and turn signal controls
- ② Steering wheel switches
- ③ Wiper and washer controls
- ④ Rear window defogger switch
- ⑤ Emergency flasher switch
- ⑥ Air conditioning controls
- ⑦ Front passenger seat belt reminder light

- ⑧ Auxiliary box
- ⑨ 12V DC Power outlet/Cigarette lighter
- ⑩ Ashtray
- ⑪ Ignition
- ⑫ Tilt steering lock release
- ⑬ Power rear view mirror controls
- ⑭ Instrument panel light control

Instrument cluster

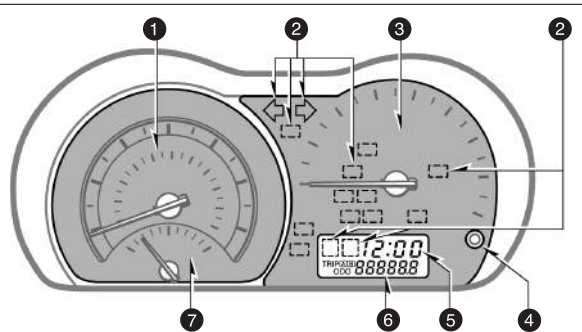

- 1 Speedometer
- 2 Service indicator and reminder
- 3 Tachometer
- 4 Clock/trip meter reset knob
- 5 Clock
- 6 Odometer and two trip meters
- 7 Fuel gauge

Indicator symbols

Brake system warning¹

Driver seat belt reminder¹

Front passenger seat belt reminder¹

Battery warning¹

Malfunction/Check Engine indicator¹

Low engine oil pressure warning¹

Low fuel level warning¹

Open door warning¹

Airbag SRS warning¹

Blue: Low engine coolant temperature indicator²
Red: High engine coolant temperature warning¹

Engine oil replacement reminder¹

Turn signal indicators

Headlight high beam indicator

Anti-lock Brake System warning¹


CAUTION

When the Anti-lock Brake System (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the Anti-lock Brake System work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

¹ For details, refer to “Service reminder indicators and warning buzzers,” Section 1-6, 2006 Owner’s Manual.


² For details, refer to “Engine coolant temperature indicator and warning light” Section 1-6, 2006 Owner’s Manual.

Fuel tank door release and cap

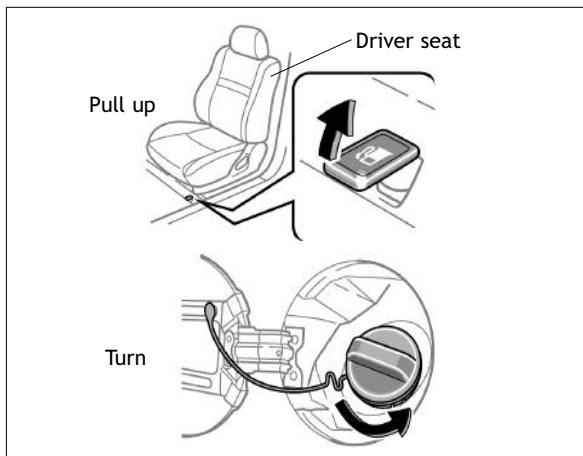


NOTE: If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

Hood release

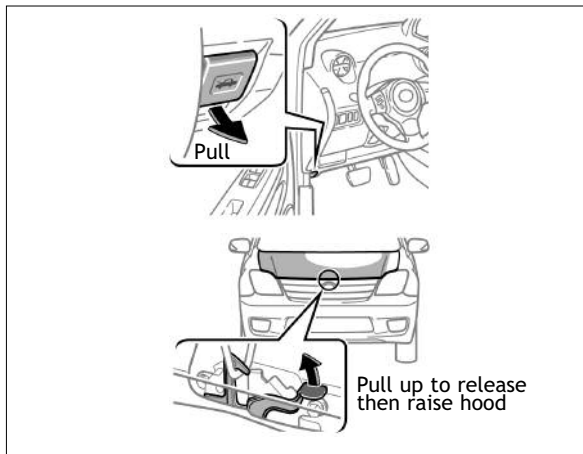

Engine maintenance

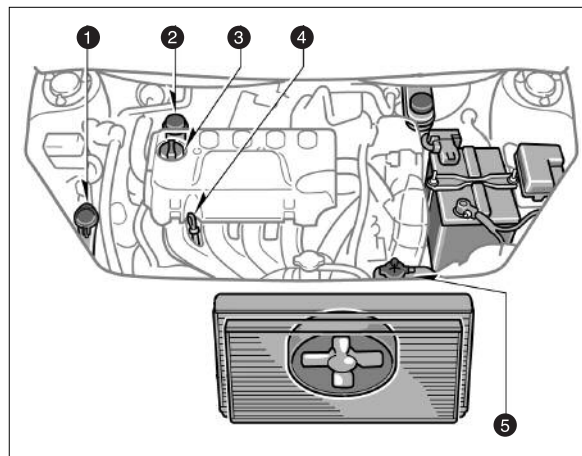


- ① Windshield washer fluid tank
- ② Power steering fluid reservoir
- ③ Engine oil filler cap
- ④ Engine oil level dipstick
- ⑤ Engine coolant reservoir

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

FEATURES/OPERATIONS

Automatic transmission (if equipped)

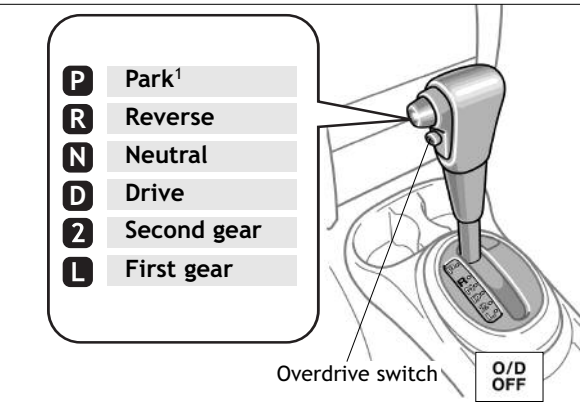

¹The ignition switch must be ON, and the brake pedal depressed.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Overdrive switch

To turn "ON" or "OFF" Depress the overdrive switch to choose either three-speed ("OFF") or four-speed ("ON") operation. During normal driving conditions, always drive with overdrive "ON," this allows the transmission to shift automatically into four-speed operation at higher speeds, improving fuel economy. If the indicator light on the instrument cluster is illuminated, overdrive is "OFF."


Manual transmission (if equipped)

For safety, the engine will not start unless the clutch pedal is FULLY depressed.

Parking brake

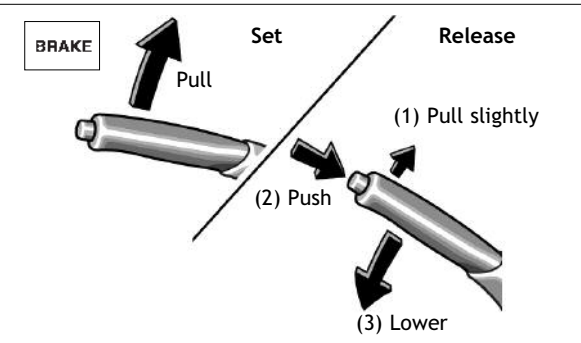

Door locks

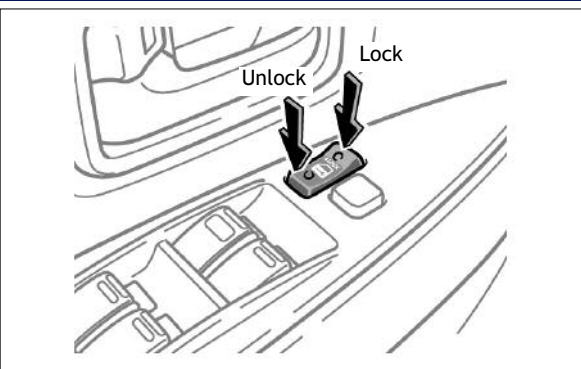


Seat adjustments-Front




- ① Position
- ② Seatback angle


Seat adjustments-Rear

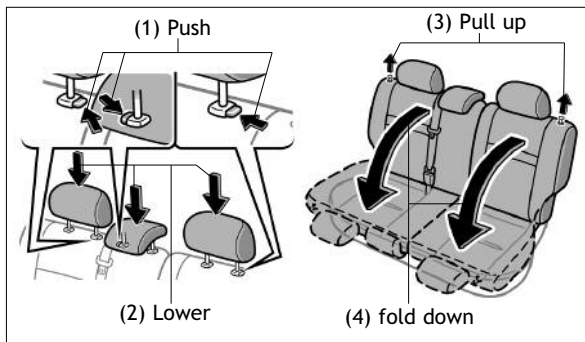

Seats-Head restraints

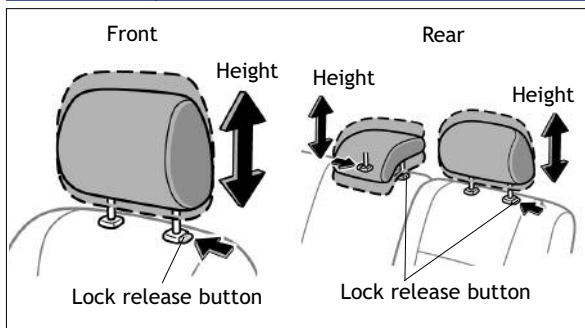

Tilt steering wheel

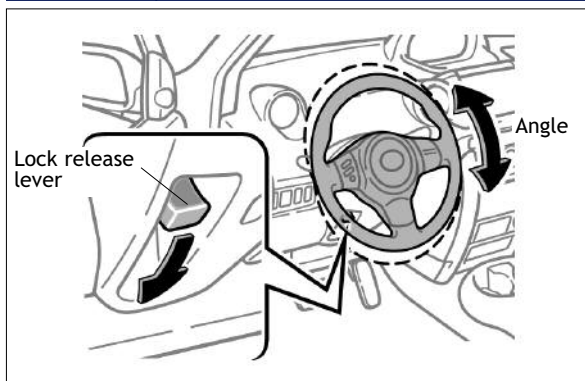


Hold wheel, push lever down, set angle then return lever.


Note: Do not attempt to adjust while the vehicle is in motion.

Lights & turn signals

Headlights

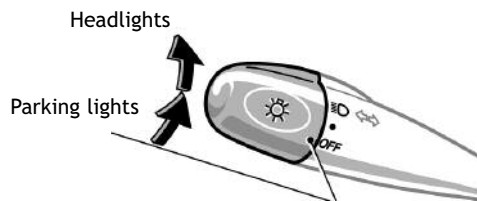


High beams

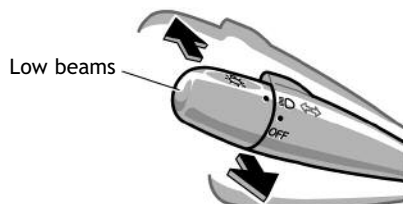


High beam flasher

Turn signals

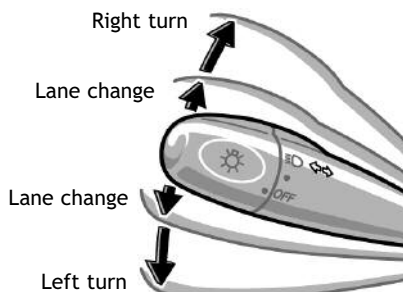


Windshield wiper & washer

Front

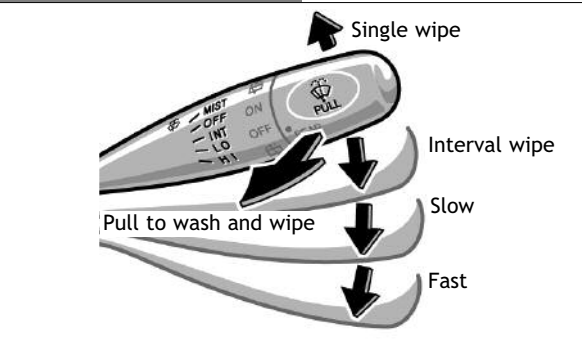


Rear

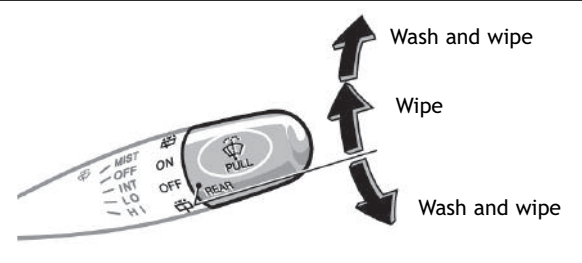

Windows


Driver side

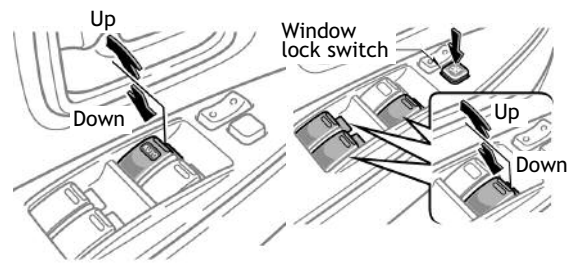


Window operation

Automatic down operation (Driver side only) Push the switch completely down and release to fully open. To stop window mid-way, lightly pull up on the switch.

Light control-Instrument panel

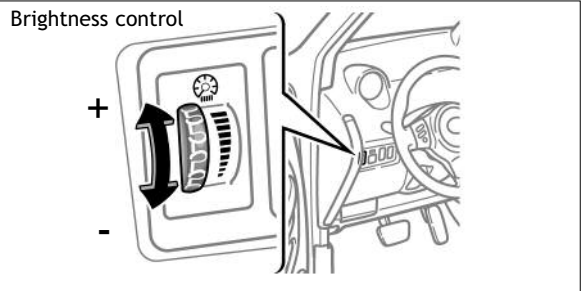


Air conditioning/Heating

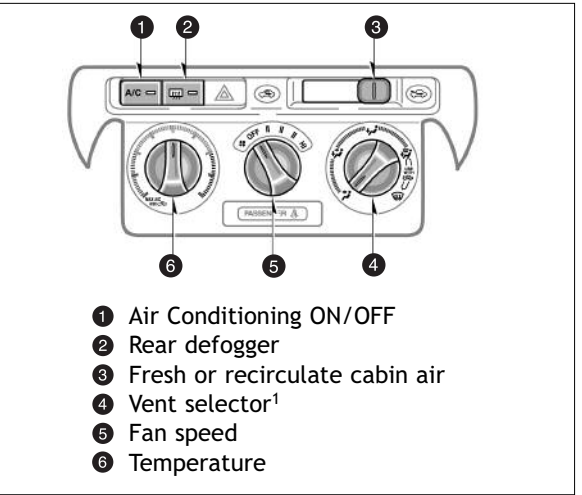

1 " " or " " use fresh air to reduce window fogging.

Clock

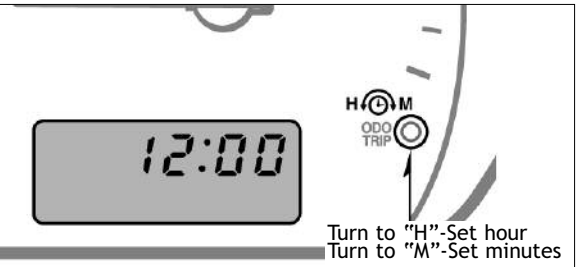


Cup holders

Front




Rear

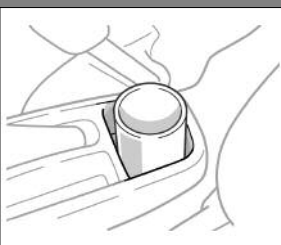


Grocery bag hooks


Front seatbacks

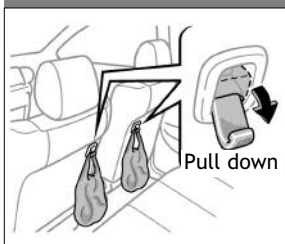


Luggage compartment

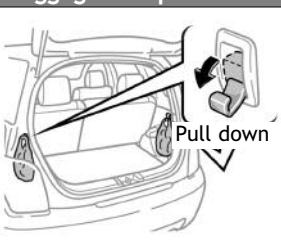

Luggage storage box

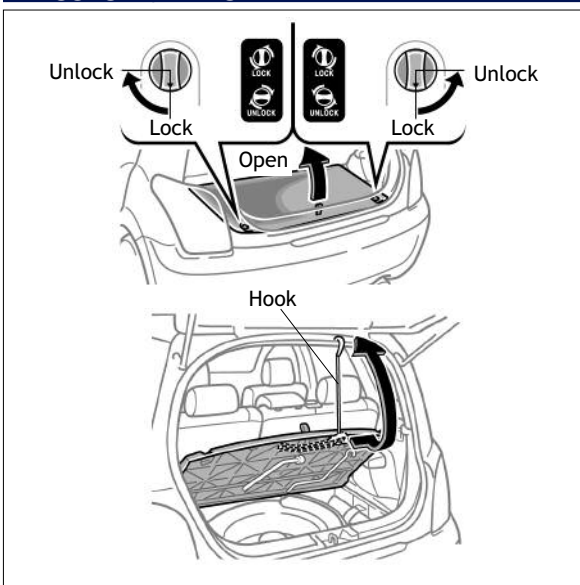


Steering wheel switches

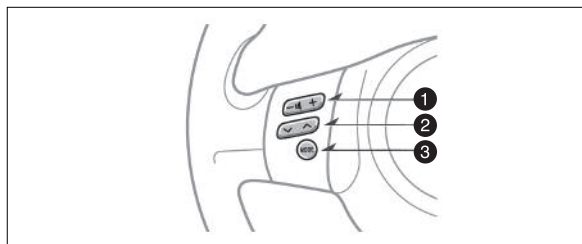

- ① “- +”
Volume control
- ② “V ^”
-In radio mode Push to select a preset station, push and hold to seek the next strong station.
-In tape mode Push to skip up or down to the next/previous track, push and hold to fast forward or reverse.
-In CD mode Push to skip up or down to a next/previous track.
- ③ “MODE”
Push to turn audio “ON” and select an audio mode. Push and hold to turn the audio system “OFF.”

AUX jack

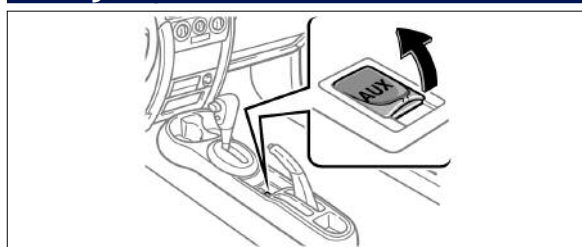


To listen to a portable audio component, connect the mini plug of a commercially available component to the AUX jack.

Refer to the *SCION Audio System Owner's Manual* for more details.


SAFETY AND EMERGENCY FEATURES

Doors-Child safety locks

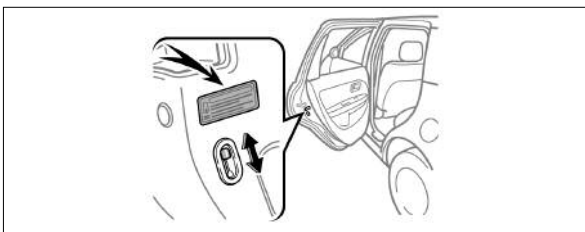

Move the lever to "LOCK," allowing the door to be opened only from the outside.

Seat belts

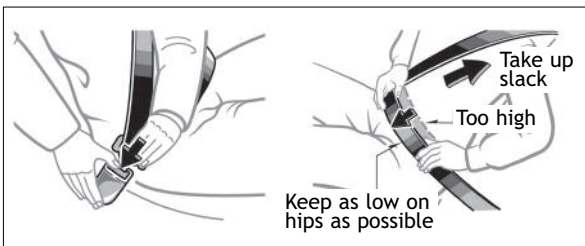

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor

